




This manual is for I/O module (step 1 and 2)
and Tamper Switch (step 3 and 4).

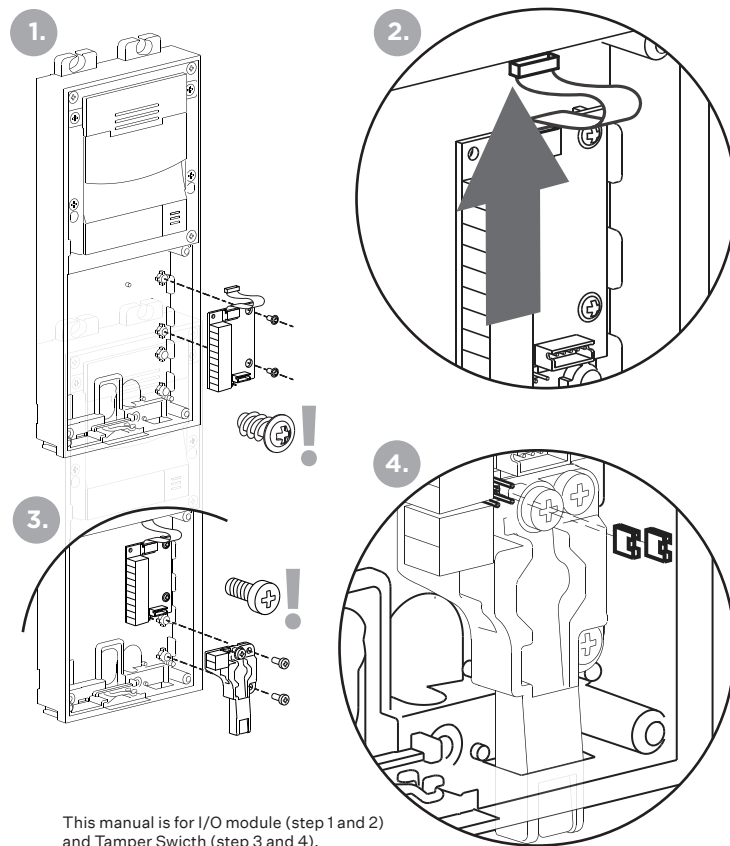

This manual is for I/O module (step 1 and 2)
and Tamper Switch (step 3 and 4).

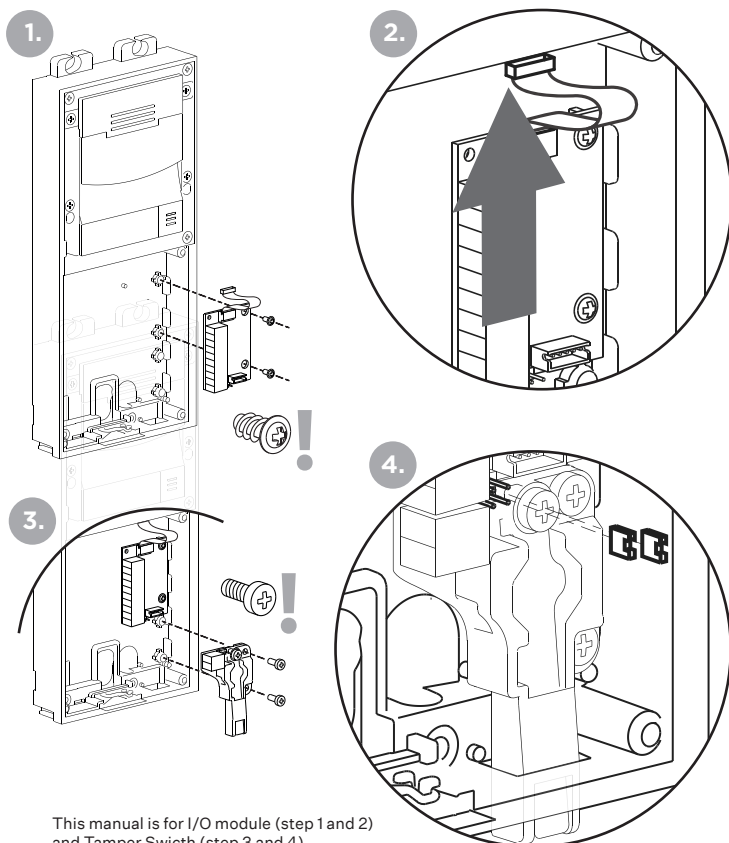

This manual is for I/O module (step 1 and 2)
and Tamper Switch (step 3 and 4).

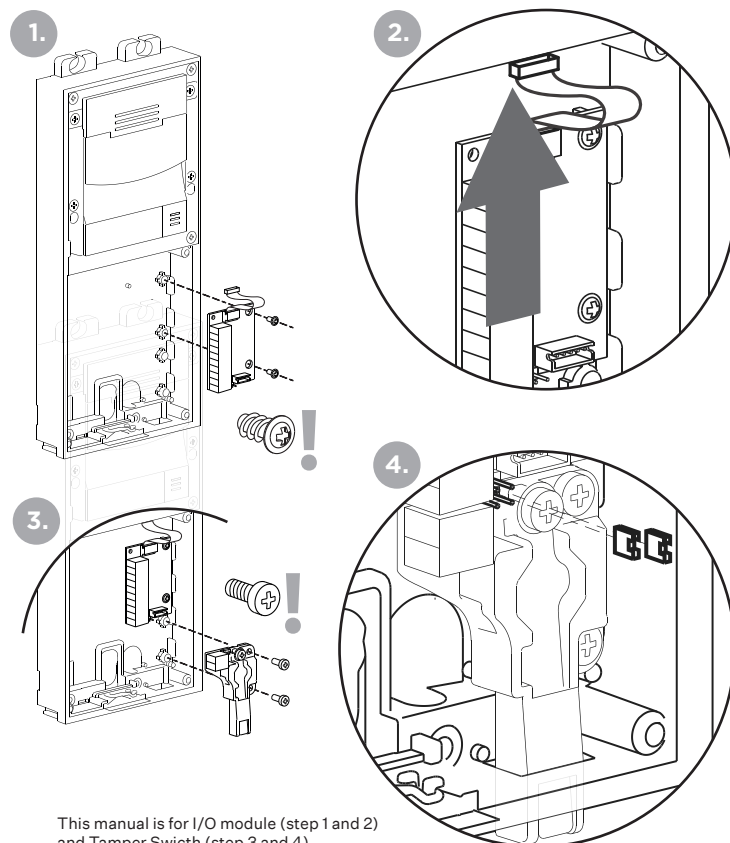

This manual is for I/O module (step 1 and 2)
and Tamper Switch (step 3 and 4).